

User Manual



All Pictures shown are for illustration purpose only. Actual product may vary due to product enhancement.

Taiwan Puritic Corp.
www.tamila-cosmedics.com

Package Contents

- Ultrasonic handy mist sprayer
- Dropper bottle
- Product manual
- Micro USB cable
- Measuring cup
- Cotton bag



1

Product Diagram



2

Liquid chamber warranty limitation and exclusive of liability

The following cases are not covered by the warranty coverage, handling or replacement fee will be charged by our company:

1. Add viscous liquid into the liquid chamber, which cause the mesh holes to clog permanently.
2. Add unknown liquid into the liquid chamber, which cause the mesh holes to erode.
3. Push hardy or the liquid chamber is squeezed by unknown force, which cause the mesh holes to break.
4. Damage of the mesh holes is caused by man-made negligence.

Warranty Card


Product name: Ultrasonic Handy Mist Sprayer tamila-S1
Date of purchase:
Name of dealer:
Dealer's address and phone number (company stamp)

service@tamila-cosmedics.com
TEL: +886-3-599-8977

Cap and Sliding Panel Replacement Instructions



3

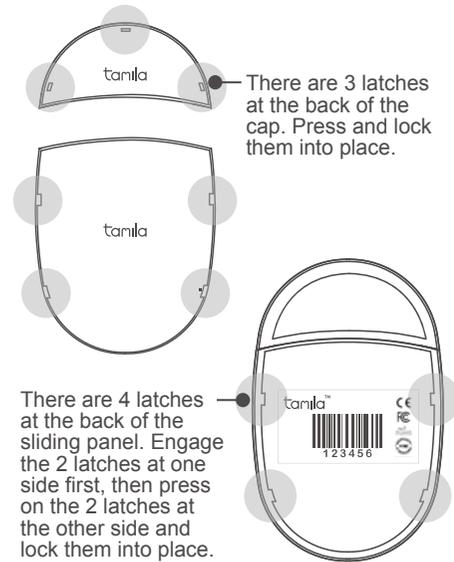

4

Liquid Loading Instructions

1. Open the cap.



5

2. Remove the liquid chamber.




3. Open the lid by holding the left & right sides of the liquid chamber.



4. Use the dropper bottle or measuring cup to add liquid into the liquid chamber until it's 80% full.



5. Close the lid properly until you hear a click.

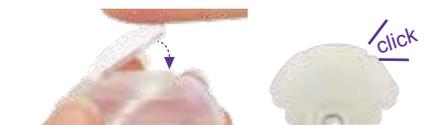

6. Plug in the liquid chamber into the device.




6

7. Close the cap properly.

Operating Instructions

⚠ Attention Note:

When the liquid chamber is not in use, please add drinking water into it until it is 40% full, keep the mesh holes moist at all time to avoid the mesh holes becoming clogged.

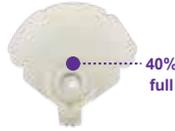


⊘ Prohibit:

Do not use viscous liquids which can cause the mesh holes become clogged.
Not all types of liquids are applicable to this device.

7

1. Slide the sliding panel **1** downwards to turn on the power.
2. Press switch **2** to activate the mist spray function.
3. Press switch **3** to adjust the volume of mist.
4. Press switch **2** one more time to stop the mist spray.
5. Slide the sliding panel **1** upwards to turn off the power.

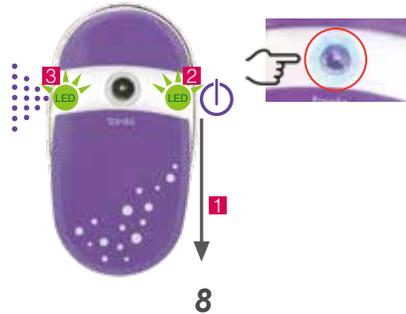

8

Charging Instructions

1. Use the 110V-220V to DC 5V USB power adapter and the provided Micro USB cable to charge the device.
2. The device can be charged by connecting the Micro USB cable with computer.
3. The device takes approximately 2.5 hours to be fully charged.



Switch **2** shows <red light>: power is too low, only 30% of power remains.



Switch **2** shows <blinking red light>: power is too low, only 10% of power remains.



Switch **3** shows <amber light>: the device is being charged.



Switch **2** **3** shows <yellow-green light>: the device is fully charged.



9

Cleaning Instructions

1. As this device is not water-proof, do not rinse it with water directly when cleaning.
2. Keep the liquid chamber PIN plug dry in order to extend the life of the device.
3. If there is some liquid remained on the surface of the mesh, gently wipe it off along the edge of the mesh with a cotton bud or tissue paper.
4. Do not touch the mesh or the convex area at the center of the mesh with sharp objects, which will cause scratches and damage to the mesh and the mesh holes.
5. After using the device for a period of time, if the mesh holes become clogged, the device can be cleaned by adding pure water into the liquid chamber and then turn on the mist power switch to activate the function.

In order to maintain the performance of the Ultrasonic Handy Mist Sprayer, please clean the liquid chamber ONCE a week.

10

Cleaning Steps

1. Open the cap.
2. Remove the liquid chamber.



3. Open the lid by holding the left & right sides of the liquid chamber.



4. Use the measuring cup to add 75% alcohol into the liquid chamber until it's 80% full.



11

5. Close the lid properly until you hear a click.
6. Shake the liquid chamber for a couple of times.



7. If there is some liquid remained on the surface of the mesh, gently wipe it off along the edge of the mesh with a cotton bud or tissue paper.



8. Plug in the liquid chamber into the device.
9. Close the cap properly.
10. Slide down the sliding panel, and press the right bottom to turn on the spray function.

11. Let the alcohol spray all out from the mist sprayer (**Keep away from fire and other ignition sources during spraying**), in order to clean up any residue which may remain in the spray mesh holes.
12. If the spray volume is still smaller than the regular volume, then repeat the above cleaning steps one more time.

12

Product Specifications

Product Name	Ultrasonic Handy Mist Sprayer
Model No.	tamila-S1
Mesh	Palladium coated Nickel-Cobalt alloy mesh (or Nickel-Cobalt alloy made by LIGA-like process)
Mesh Hole Size	Average 5~8μm
Product Material	ABS+PC, PP, EP
Power Source	Built-in Lithium Battery (420 mAh/DC 3.7 V) Micro USB cable
Power Consumption	1.3W
Capacity of Liquid Chamber	7ml
Product Size	9.0x5.7x2.0 cm
Net Weight	60 g
Certifications	CE, FCC, RoHS
Patents	TW Patent No. M486491 TW Patent No. M486989 TW Patent No. M497471 TW Patent No. M497563 TW Patent No. M497564/M487087 JP Patent No. 3193688 CN Patent No. 201420103371.8

13

Product Warranty

Warranty Coverage

Each of our company's product has one year warranty in its materials and workmanship from date of purchase. If product fails under proper use, and after judgment it is the problem of the product itself, our company will bear the responsibilities of repair within the warranty period.

Warranty Period

Warranty period for the main device is one year, for the lithium battery is 6 months, and for the liquid chamber is 6 months.

Warranty Acknowledgement

1. Warranty card or proof of purchase
To ensure customer's rights, please ask the dealers to fill in the product model, serial number, and date of purchase on the warranty card, as well as to stamp the dealer's stamp on it. Please keep the warranty card or the relevant proof of purchase (such as invoice or sales slip).

2. Direct identification

If consumers are unable to present with warranty card or proof of purchase, the effective date of warranty will be added 2 months from the date of manufacture which shows on the serial number of product label.

Note: If the date of manufacture is March 2018, then the warranty period is good until end of May 2019.

14